

Silverton 33C  
Bimini Enclosure  
With or without an Arch

<u>Part of boat:</u>			<u>P/N</u>
<u>                    </u>	2pcs	<i>Flex rail track 7'6" (packed w/ frame)</i>	<i>T5</i>
<u>                    </u>	2pcs	<i>Flex rail track 5' (packed w/ frame)</i>	<i>T5</i>
<u>                    </u>	100	<i>Flex rail screws</i>	<i>FRSC</i>
<u>                    </u>	16	<i>LTD studs</i>	<i>16360</i>

**Silverton 33C**  
**Bimini Enclosure**  
**With or without an Arch**



Begin installing 7'6" track on the front center of the bridge. Mount the track on top of the feature as shown in this picture. Install a flex rail screw every 4".



Work out from the center toward the corner. Install the screws more often to make the track bend smoothly.

**Silverton 33C**  
**Bimini Enclosure**  
**With or without an Arch**




Secure the track to the end following the feature in the bridge as shown in this picture. Repeat on the opposite side.



The 5' track starts at the point in this picture (Big red arrow). Work down the side of the bridge keeping the track near the inside edge. (Tape measure shows measure for frame hardware used in the Frame Hardware Instructions)

**Silverton 33C**  
**Bimini Enclosure**  
**With or without an Arch**

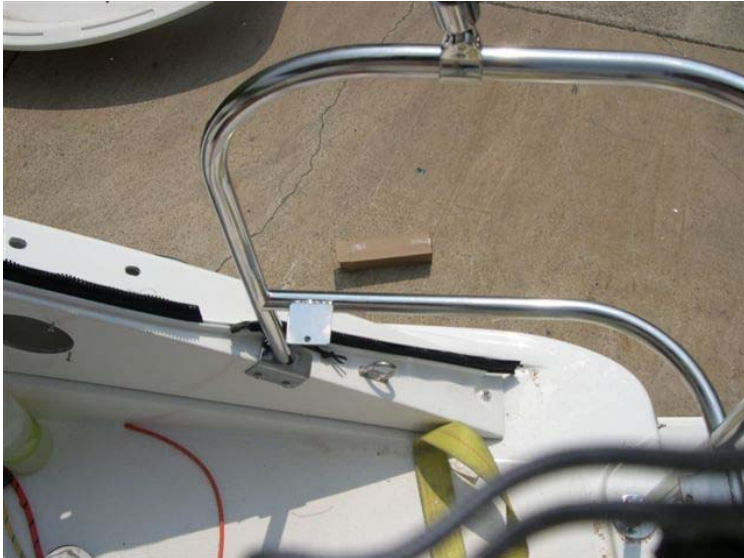

On boats without an arch the track can fade to the outside edge. Boats with the arch the track has to stay on the inside edge. All boats must fade to outside of railing as shown in picture. Repeat on opposite side.



Zip all 7 panels to the bimini top and to each other. The rope zipper supplied with the enclosure is for the front 2 panels and the front of each side panel.

**Silverton 33C**  
**Bimini Enclosure**  
**With or without an Arch**



Slide the rope zipper into the track around the front of the bridge. Make sure the Velcro on the zipper is facing out. Zip the side curtains to the rope first; this will position the front 2 curtains correctly. Connect the front 2 curtains to each zipper. Partially unzip the tops of the curtain to make it easier to get the bottoms zipped.



Align the door over the opening, pull tight and mark the Port Corner button. Install a LTD stud provided and snap the curtain in place. Move to the STBD corner of the bridge pull the curtains tight down and across. Install a LTD stud in the corner just before the bridge curves around to the side. Mark the remaining buttons and install.



**Silverton 33C**  
**Bimini Enclosure**  
**With or without an Arch**



There is a LTD at the end of the zipper rope on each side. Install these buttons and the enclosure is complete.